



**Agrident GmbH, Steinklippen Str. 11, D-30890 Barsinghausen
Phone +49 5105 520614 - Fax +49 5105 520616**

Updating the AWR 100 Firmware


V05/02/08

The AWR has to be connected to the computer via the RS232 endcap. Updating the firmware via Bluetooth is not possible!

For updating the AWR100 always use the batch file AWR100_xxx.bat.


Double click on AWR100_xxx.bat to start the update.

The following dialog appears:

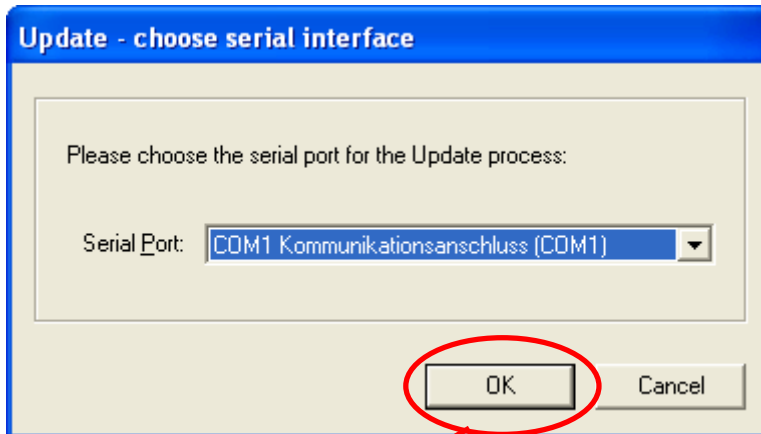


Choose the connected serial port and press ok.

Now the following dialog appears:

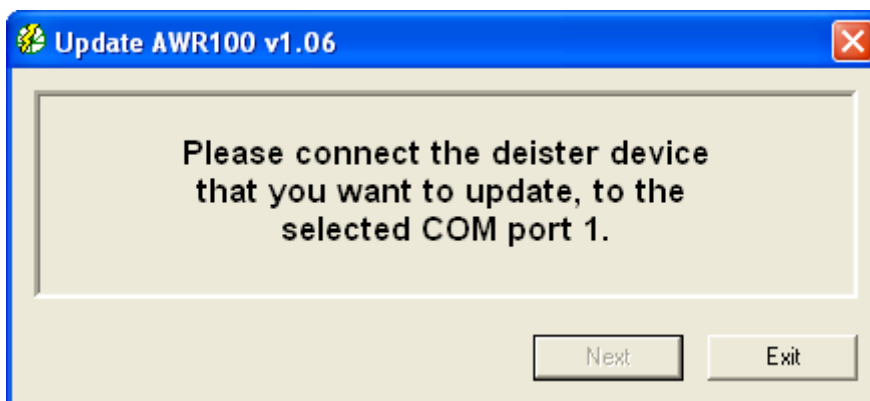

Wait until the following dialog appears:

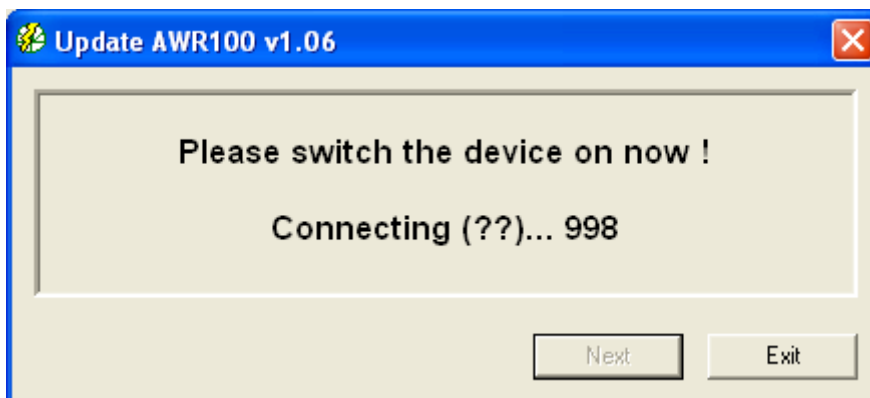


Press Read button to start the update.




If Press key appears on the LCD display of the AWR100, the update didn't start and failed.

The counter of the update software is still running. Wait until the AWR has switched off and press the read button again. There is no need to restart the update software. If the update won't start after several attempts, check if the connection of the interface is correct and if the correct comport is selected.


If update starts successfully, the LCD display is empty and the following dialog appears:

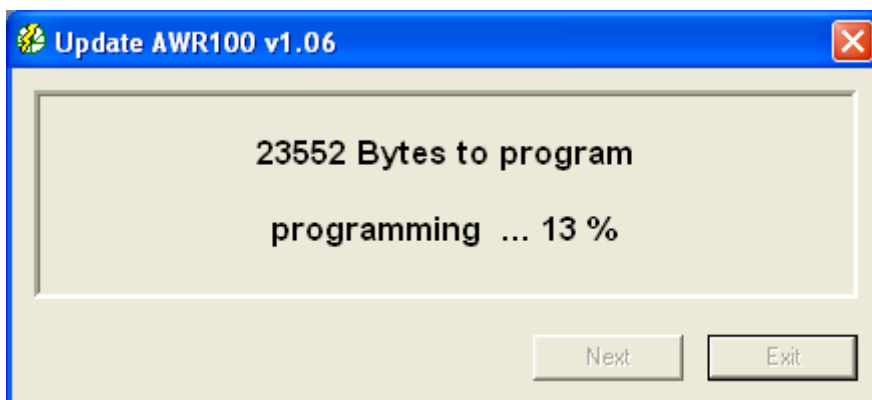

The programming counter starts. After the update is complete and successful, the following dialog appears:

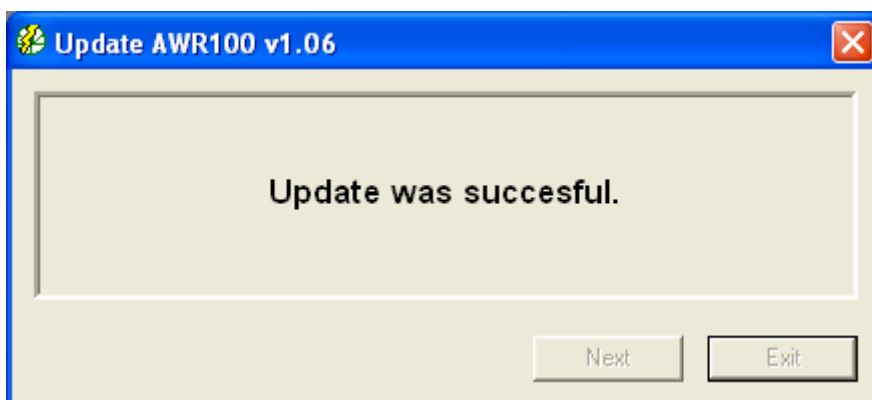

The following dialog appears:

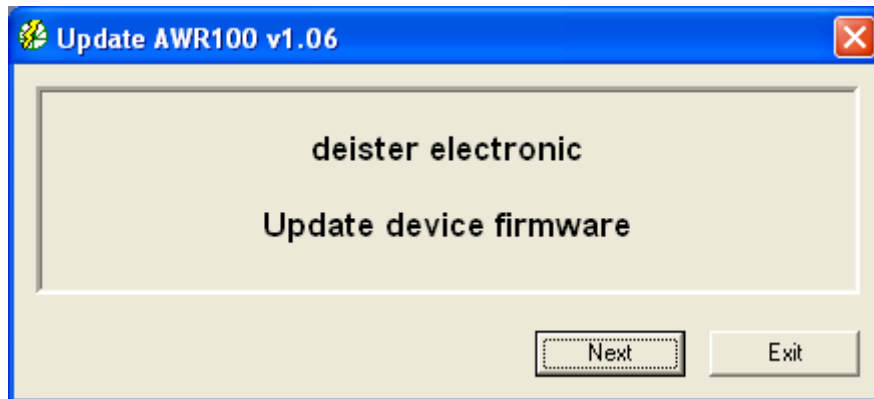

Press Exit if there are no other devices for updating, press next if you want to update another reader.